


REMOVAL AND INSTALLATION

Radiator

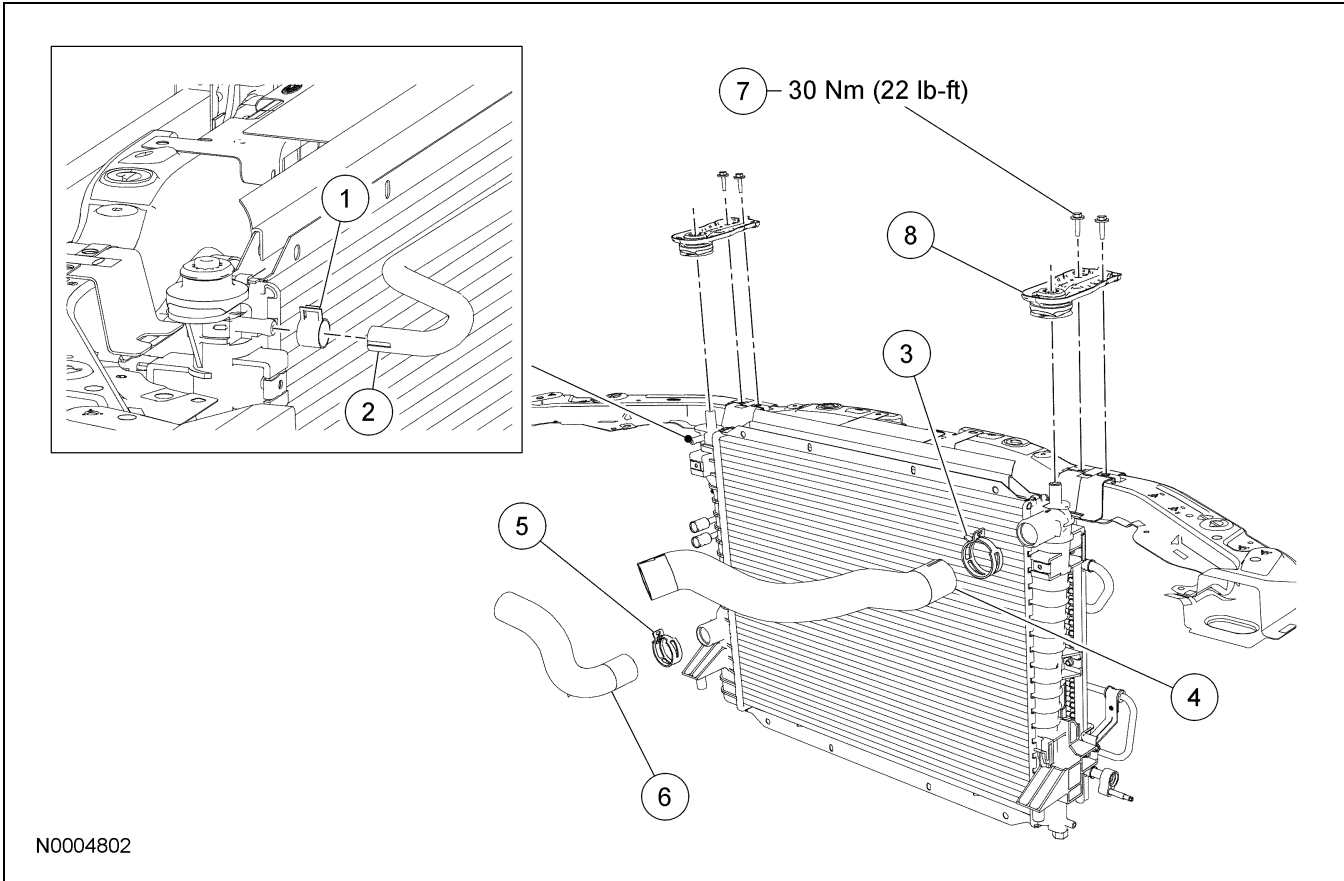


N0004802

Item	Part Number	Description
1	W527383	Hose clamp
2	8C633	Degas bottle-to-radiator hose
3	8287	Hose clamp
4	8260	Upper radiator hose
5	8287	Hose clamp


Item	Part Number	Description
6	8286	Lower radiator hose
7	W505424	Radiator support bracket bolt (4 required)
8	8226	Radiator support bracket (2 required)

(Continued)

REMOVAL AND INSTALLATION (Continued)

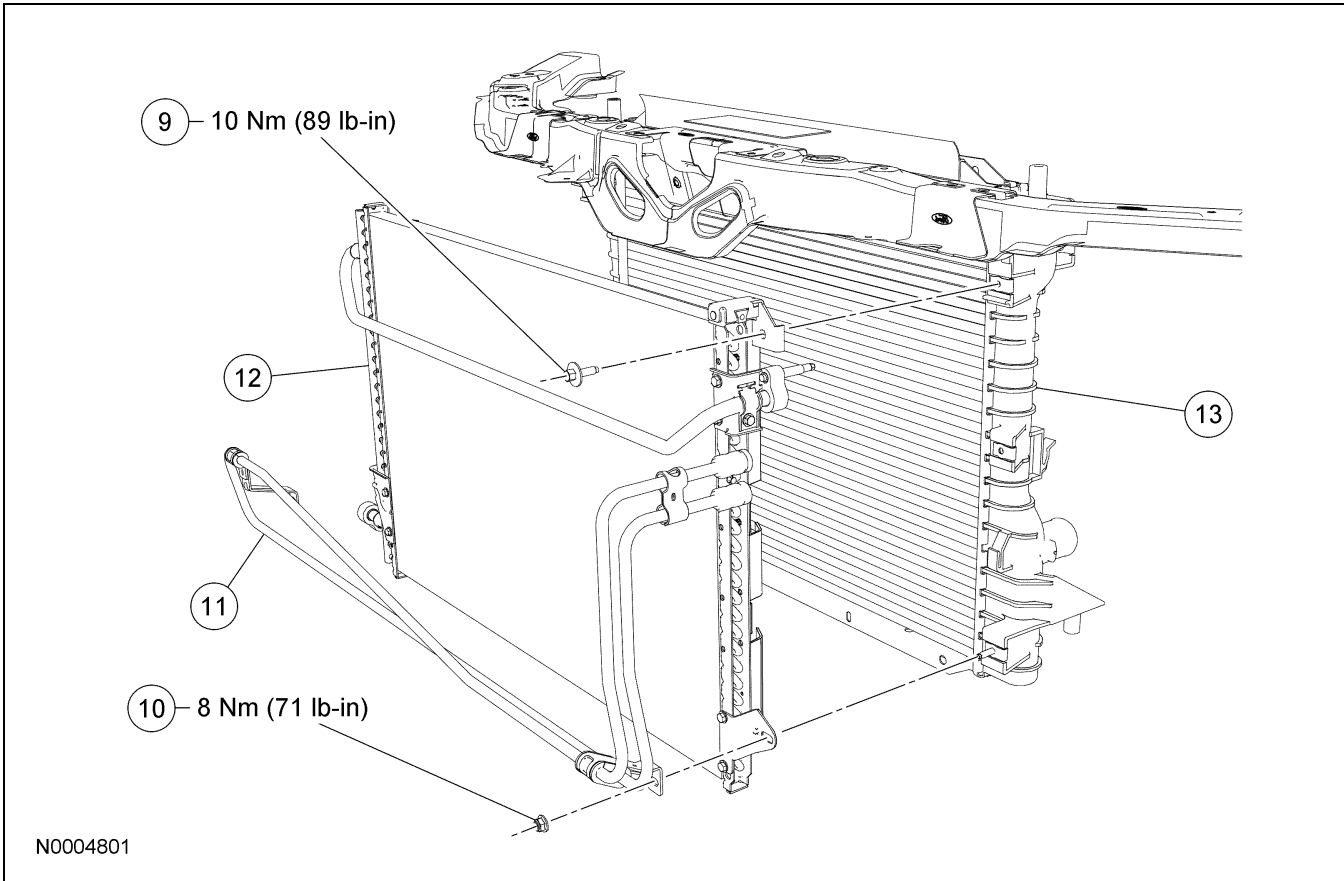

Item	Part Number	Description
9	N606676	A/C condenser bolt (2 required)
10	—	Power steering tubes and A/C condenser retaining nut (2 required)
11	3F780	Power steering tubes
12	19710	A/C condenser
13	8005	Radiator

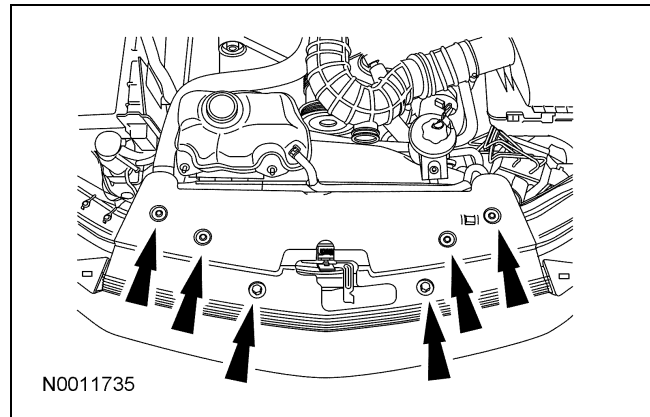

Removal and Installation

1. Drain the cooling system. For additional information, refer to Cooling System Draining, Filling and Bleeding in this section.
2. Remove the 4 push pin retainers and the air deflector.
3. Remove the cooling fan motor and shroud. For additional information, refer to Cooling Fan Motor and Shroud in this section.
4. Disconnect the degas bottle-to-radiator hose and position aside.
5. Disconnect the upper radiator hose from the radiator and position aside.
6. Disconnect the lower radiator hose from the radiator and position aside.

REMOVAL AND INSTALLATION (Continued)

7. Remove the 4 bolts and the radiator support brackets.
 - To install, tighten to 30 Nm (22 lb-ft).
 8. Remove the 2 power steering tubes and A/C condenser retaining nuts and position aside the power steering tubes.
 - To install, tighten to 10 Nm (89 lb-in).
 9. Remove the 2 A/C condenser bolts and remove the radiator.
 - To install, tighten to 10 Nm (89 lb-in).
 10. To install, reverse the removal procedure.
 11. Fill and bleed the cooling system. For additional information, refer to Cooling System Draining, Filling and Bleeding in this section.
-