



FUSE POSITION	AMPS	CIRCUITS PROTECTED
1	15	Air Bag Diagnostic Module, Shift Lock Actuator, Electronic Flasher, Rear Window Defrost Control Switch, Daytime Running Lamps (DRL), Transmission Control Switch, Convertible Top Switch, Backup Lamp Switch, Digital Transmission Range (DTR) Sensor
2	30	Interval Wiper/Washer (Module & Motor)
4	10	Air Bag System
5	15	Main Light Switch
6	15	Speed Control Amplifier, Warning Chime, Clock, A/C-Heater Control Assembly, Anti-theft Controller Module, Remote Keyless Entry Module
7	10	Anti-lock Brake System
8	10	Courtesy Lamps, Radio, Power Mirror, Remote Keyless Entry, Clock
9	15	Brake Pedal Position (BPP) Switch, Brake Pressure Switch and Electronic Flasher
10	15	Intake Manifold Runner Control (IMRC)
11	15	Radio
12	20 c.b.	Power Door Locks, Remote Keyless Entry, Trunk Lid Release Switch
13	10	Instrument Illumination
14	20 c.b.	Power Windows
15	10	Instrument Cluster, Warning Chime, Air Bag Diagnostic Module
16	20	Anti-theft System, Flash-to-Pass, Passive Anti-Theft System
17	30	Heater/Air Conditioning
18	20	Instrument Cluster, Anti-Theft System, Constant Control Relay Module, Ignition System

Instrument Panel Fuse Panel